

HOW TO PUT ON A FRONTZIP DRYSUIT


If you follow this simple instruction when donning and doffing your drysuit, the dryzipper and silicone seals will last much longer.



1. Put on both legs and pull up the suit as much as possible. Tighten the suspenders. Keep the suit pulled up during the whole donning process.



2. Start with the arm where the zipper is on the shoulder. Don't stress the seal, open it with your other hand. Be careful with sharp objects and fingernails.

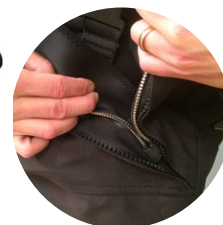

The zipper ends are sensitive. To open the zipper with too much force may break the zipper at the ends.

3. Be extra careful with the zipper ends when donning the second arm. Especially with thick undergarment. Never force your arm in or out of the suit if there is little space.



4. Help donning the seal with your other hand. Don't stress the seal.



5. Fully open the neckseal with both hands before pulling it over your head. Be careful with sharp objects and fingernails.



6. Make sure the zipper is straight before pulling the slider down. Never pull with too much force.

IMPORTANT!
Remember to lubricate your dry zipper.